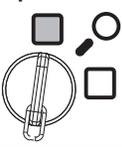
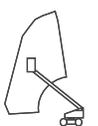 
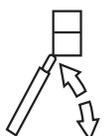 


1200SJP/1350SJP Quick Reference

Getting Started

Located at: - Platform Station
 - Ground Station

STEP 1 <input type="checkbox"/>	Read the Operation and Safety Manual. Perform pre-start inspection. 
STEP 2 <input type="checkbox"/>	Select platform controls 
STEP 3 <input type="checkbox"/>	Pull out both E-Stops 
STEP 4 <input type="checkbox"/>	Start Engine  Below 20°F (-7°C) run engine for 15 min. before operating machine.
STEP 5 <input type="checkbox"/>	Verify axles are extended before lifting boom 
STEP 6 <input type="checkbox"/>	Select appropriate platform capacity  
STEP 7 <input type="checkbox"/>	Select desired Boom Control  
STEP 8 <input type="checkbox"/>	Enable footswitch 
STEP 9 <input type="checkbox"/>	Operate Machine 

Controls and Indicators



Axles

Axles must be extended and the Axle Set Light must be on to elevate the boom. To extend the axles, select the axle extend switch while driving forward or reverse.



Drive Orientation Override

If operating drive and the Drive Orientation Light flashes, the drive controls may be opposite from the intended driving direction. To continue: 1) verify the intended drive direction, 2) push and release the Drive Orientation Override switch, and 3) operate drive within 3 seconds.

 


When the Platform Capacity is selected to the 500 lb (230 kg) position, the 500 lb (230 kg) light will be on and the JLG control system will allow operation within the larger envelope. **The side swing jib can be used with this selection.**



When the Platform Capacity is properly selected to the 1000 lb (450 kg) position, the 1000 lb (450 kg) light will be on, and the JLG control system will allow operation within the smaller envelope. **The side swing jib must remain in the centered position with this selection.**

Note: If both capacity lights are flashing, the boom or jib is out of the allowable envelope. Remove platform load over 500 lb (230 kg) and select the 500 lb (230 kg) capacity position.

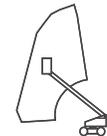

Automatic

Boom Control Select

When the Boom Control is selected to the **Automatic** position, lift and telescope movements are coordinated by the JLG control system and the automatic platform leveling feature is active during lift, swing, and drive movements.

Note: When selected to the Automatic position, the coordination of boom movements within the envelope is as follows:

- While operating Lift Up, the boom may also telescope out
- While operating Lift Down, the boom may also telescope in
- While operating Swing or Drive, the boom may lift up or lift down
- While operating Telescope In, the boom may lift down when at high boom angles and the creep light is flashing



Manual

When the Boom Control is selected to the **Manual** position, lift and telescope movements are controlled separately by the operator and the automatic platform leveling feature is active only during lift movements.

Note: When selected to the Manual position, the boom movements will be stopped when the envelope limits are reached. If this occurs, operate the function in the opposite direction, operate a different function, or select the Automatic position.



Boom Control System Warning

If operating a function causes the Boom Control System Warning Light to flash and the platform alarm to sound, the selected movement is not allowed. To continue movement, operate the function in the opposite direction or operate a different function.

⚠ WARNING! The Boom Control System Warning Light may indicate contact of the machine with another structure and continued movement may result in damage to the machine or machine tip over.



Creep Speed

The creep light acts as a reminder that all functions are set to the slowest speed. The light will be on continuously if the creep switch is selected by the operator. The creep light will flash if the JLG control system has selected this creep speed automatically. This occurs when the boom is near the edge of the envelope or the Boom Control System Warning is active.



 
Footswitch/Enable

To enable the platform controls, step on the footswitch FIRST and then choose a function within 7 seconds. If no function is selected within 7 seconds, the Footswitch/Enable light will turn off and the footswitch must be released and depressed again.

1200SJP/1350SJP Quick Reference

Getting Started

Located at: - Platform Station
 - Ground Station

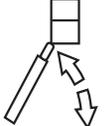STEP 1 <input type="checkbox"/>	<p>Read the Operation and Safety Manual. Perform pre-start inspection.</p> 
STEP 2 <input type="checkbox"/>	<p>Select platform controls</p> 
STEP 3 <input type="checkbox"/>	<p>Pull out both E-Stops</p> 
STEP 4 <input type="checkbox"/>	<p>Start Engine</p>  <p>Below 20°F (-7°C) run engine for 15 min. before operating machine.</p>
STEP 5 <input type="checkbox"/>	<p>Verify axles are extended before lifting boom</p> 
STEP 6 <input type="checkbox"/>	<p>Select appropriate platform capacity</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>500 lb MAX 227 kg MAX</p> </div> <div style="text-align: center;">  <p>1000 lb MAX 454 kg MAX</p> </div> </div>
STEP 7 <input type="checkbox"/>	<p>Select desired Boom Control</p> <div style="display: flex; justify-content: space-around;">   </div>
STEP 8 <input type="checkbox"/>	<p>Enable footswitch</p> 
STEP 9 <input type="checkbox"/>	<p>Operate Machine</p> 

Controls and Indicators



Axles

Axles must be extended and the Axle Set Light must be on to elevate the boom. To extend the axles, select the axle extend switch while driving forward or reverse.



Drive Orientation Override

If operating drive and the Drive Orientation Light flashes, the drive controls may be opposite from the intended driving direction. To continue: 1) verify the intended drive direction, 2) push and release the Drive Orientation Override switch, and 3) operate drive within 3 seconds.



When the Platform Capacity is selected to the 500 lb (227 kg) position, the 500 lb (227 kg) light will be on and the JLG control system will allow operation within the larger envelope. **The side swing jib can be used with this selection.**



When the Platform Capacity is properly selected to the 1000 lb (454 kg) position, the 1000 lb (454 kg) light will be on, and the JLG control system will allow operation within the smaller envelope. **The side swing jib must remain in the centered position with this selection.**

Note: If both capacity lights are flashing, the boom or jib is out of the allowable envelope. Remove platform load over 500 lb (227 kg) and select the 500 lb (227 kg) capacity position.



Automatic

Boom Control Select

When the Boom Control is selected to the **Automatic** position, lift and telescope movements are coordinated by the JLG control system and the automatic platform leveling feature is active during lift, swing, and drive movements.

Note: When selected to the Automatic position, the coordination of boom movements within the envelope is as follows:

- While operating Lift Up, the boom may also telescope out
- While operating Lift Down, the boom may also telescope in
- While operating Swing or Drive, the boom may lift up or lift down
- While operating Telescope In, the boom may lift down when at high boom angles and the creep light is flashing



Manual

When the Boom Control is selected to the **Manual** position, lift and telescope movements are controlled separately by the operator and the automatic platform leveling feature is active only during lift movements.

Note: When selected to the Manual position, the boom movements will be stopped when the envelope limits are reached. If this occurs, operate the function in the opposite direction, operate a different function, or select the Automatic position.



Boom Control System Warning

If operating a function causes the Boom Control System Warning Light to flash and the platform alarm to sound, the selected movement is not allowed. To continue movement, operate the function in the opposite direction or operate a different function.

⚠ WARNING! The Boom Control System Warning Light may indicate contact of the machine with another structure and continued movement may result in damage to the machine or machine tip over.



Creep Speed

The creep light acts as a reminder that all functions are set to the slowest speed. The light will be on continuously if the creep switch is selected by the operator. The creep light will flash if the JLG control system has selected this creep speed automatically. This occurs when the boom is near the edge of the envelope or the Boom Control System Warning is active.



Footswitch/Enable

To enable the platform controls, step on the footswitch FIRST and then choose a function within 7 seconds. If no function is selected within 7 seconds, the Footswitch/Enable light will turn off and the footswitch must be released and depressed again.